


INSTRUCTION SHEET
REPLACEMENT BLADE Cat. #B-109
SWING-SAW®
MODEL SW-130

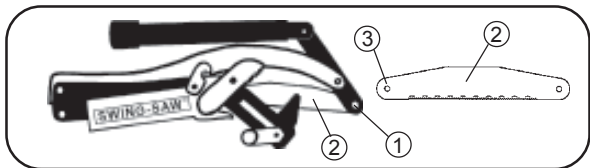

To replace a worn blade use the point of a nail, solid wire, pencil, etc. to push the spring loaded pin ① retaining the end of the blade. Push the pin just enough to slide the blade ② out. Repeat this on the other end of the blade ③. Reverse the procedure to install a new blade. **(Note the teeth should always be pointing towards the front of the Swing-Saw.)**

If you would like more information on our unique product line, please call, fax, or visit our web site at www.SeatekCo.com. Thank you for purchasing a fine product designed, manufactured and assembled in the USA.



392 Pacific Street
Stamford, CT 06902

PHONE (203) 324-0067 FAX (203) 324-7844