INSTRUCTION SHEET
REPLACEMENT BLADE CARTRIDGE B-202

STRIP-ALL®

MODEL SA-200

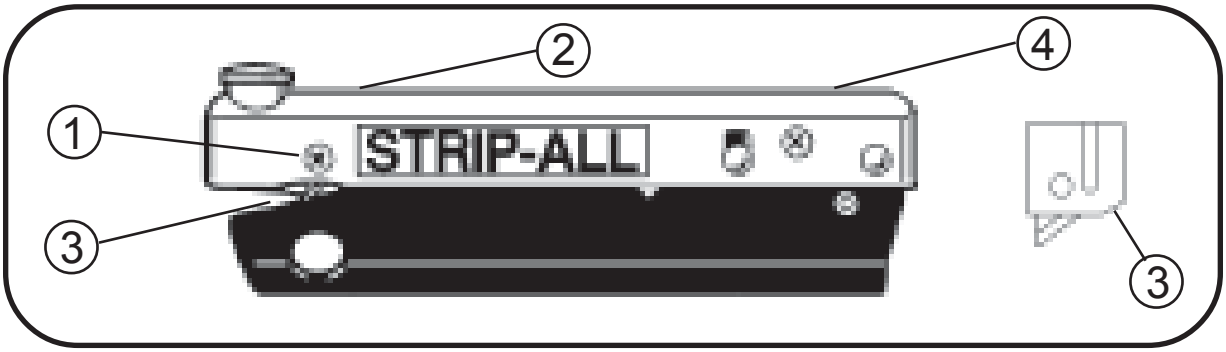

To replace the blade cartridge simply remove screw ① and tap the top of the tool ② against a wooden surface to dislodge the cartridge ③. If the cartridge does not easily fall out, push the cartridge ③ out with a bent paper clip or wire. Follow these instructions to change the spare cartridge ④ in the rear of the ***STRIP-ALL***.

If you would like more information on our unique product line, please call, fax, or visit or web site at *www.SeatekCo.com*. Thank you for purchasing a fine product designed, manufactured and assembled in the USA.

SEATEK Co. Inc.

392 Pacific Street
Stamford, CT 06902

PHONE (203) 324-0067 FAX (203) 324-7844